



Custom Setting Pocket Guide

Nikon F100

- 1** Select a menu number by rotating the Main-Command Dial while pressing the Custom Setting button **CSM**.

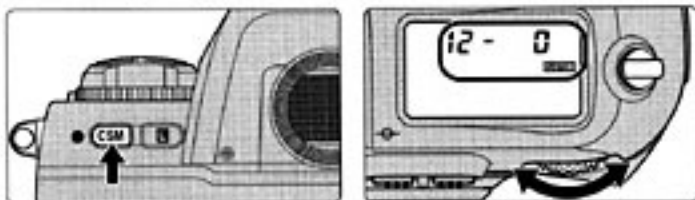

- 2** While holding the **CSM** button, select the desired option number (or character) by rotating the Sub-Command Dial.

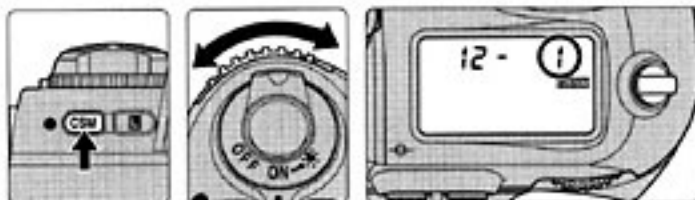

- When you remove your finger from the **CSM** button after the desired option number (or character) is displayed in the LCD panel, **CUSTOM** appears in the LCD panel.
- To return all the Custom Setting to their initial factory settings, press the **CSM** and **MODE** buttons simultaneously, and hold them for more than 2 sec. Release one of the two buttons once while the **CUSTOM** indication is blinking (for 2 sec.), then press both buttons again.

	Function	Options
1	Automatic film rewind at the end of film roll	0: Disabled (initial setting) 1: Enabled
2	Change of steps of the exposure values (shutter speed, aperture, exposure compensation or compensated EV value in Bracketing)	3: 1/3 steps (initial setting) 2: 1/2 steps 1: 1 steps
3	Bracketing order	0: Initial setting (See pages 58-59.) 1: From negative value to positive value
4	Autofocus activated when shutter release button lightly pressed	0: Enabled (initial setting) 1: Disabled
5	Warning indications with non-DX-coded film	0: After film is advanced to the first frame (initial setting) 1: When the power switch is on
6	Focus area selection changed to continuously in the same direction	0: Disabled (initial setting) 1: Enabled
7	Auto Exposure Lock when shutter release button is lightly pressed	0: Disabled (initial setting) 1: Enabled
8	Film advance with closing the camera back (when power switch is on)	0: Disabled (initial setting) 1: Enabled

• See pages 71-72 of the instruction manual for details.

	Function	Options
9	Dynamic AF Mode with Closest Subject Priority in Single Servo AF	0: Enabled (initial setting) 1: Disabled
10	Dynamic AF Mode with Closest Subject Priority in Continuous Servo AF	0: Disabled (initial setting) 1: Enabled
11	Auto Exposure/Flash Exposure Bracketing options	AS: Simultaneous activation of Auto Exposure/Flash Exposure Bracketing (initial setting) AE: Only Auto Exposure Bracketing activated SB: Only Flash Exposure Bracketing activated
12	Switching Command Dial operations	0: Disabled (initial setting) 1: Enabled
13	Easy Exposure Compensation	0: Disabled (initial setting) 1: Enabled
14	Film advance in multiple exposure	0: Single frame shooting (initial setting) 1: Continuous shooting
15	Delay time for auto meter-switch off	4 : 4 sec. 6 : 6 sec. (initial setting) 8 : 8 sec. 16 : 16 sec.

- See pages 72-74 of the instruction manual for details.

	Function	Options
16	Delay time for self-timer operation	2 : 2 sec. 5 : 5 sec. 10 : 10 sec. (initial setting) 20 : 20 sec.
17	LCD illuminator activated by pressing any button	0: Disabled (initial setting) 1: Enabled
18	Data imprint (year/month/day/hour/minute) on frame #0	0: Disabled (initial setting) 1: Enabled
19	Aperture control	0: Aperture value remains (initial setting) 1: Aperture step from the lens' maximum remains unchanged
20	Shutter release confirmation with self-timer LED	0: Disabled (initial setting) 1: Enabled
21	AE-L/AF-L button options	0: Simultaneous Auto Exposure/autofocus lock operation (initial setting) 1: Auto Exposure lock only 2: Autofocus lock only 3: Auto Exposure lock remains after removing finger from the button
22	Aperture setting with lens' aperture ring	0: Disabled (initial setting) 1: Enabled

• See pages 74-75 of the instruction manual for details.